



Date: January 22nd, 2020

ADI-P Controller - Solenoid Replacement Instructions

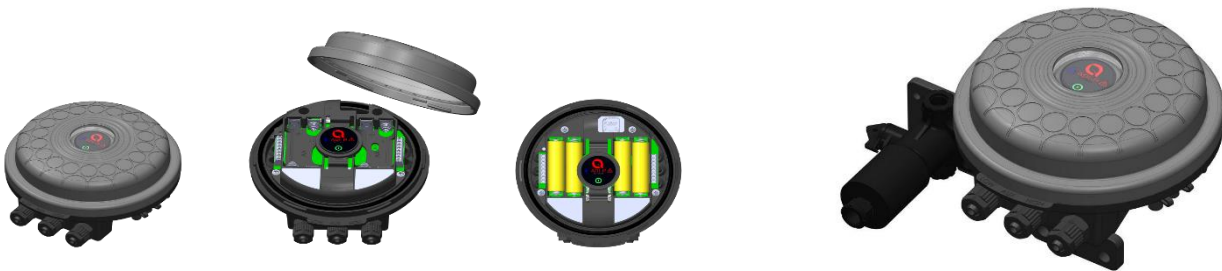


Instructions:


1. Open the ADI-P controller cover by turning it counterclockwise

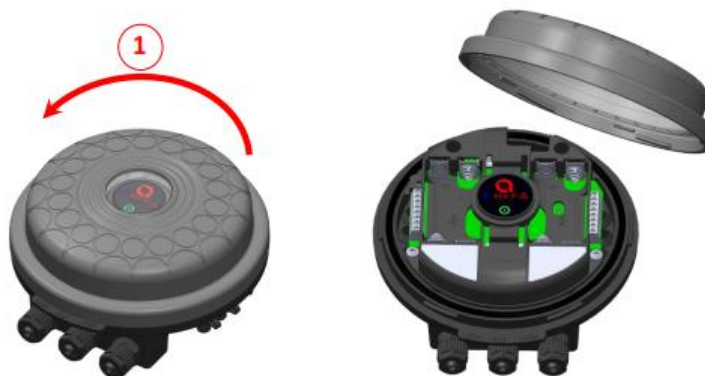


2. Disconnect the red & black solenoid wires and pull them out of the controller box

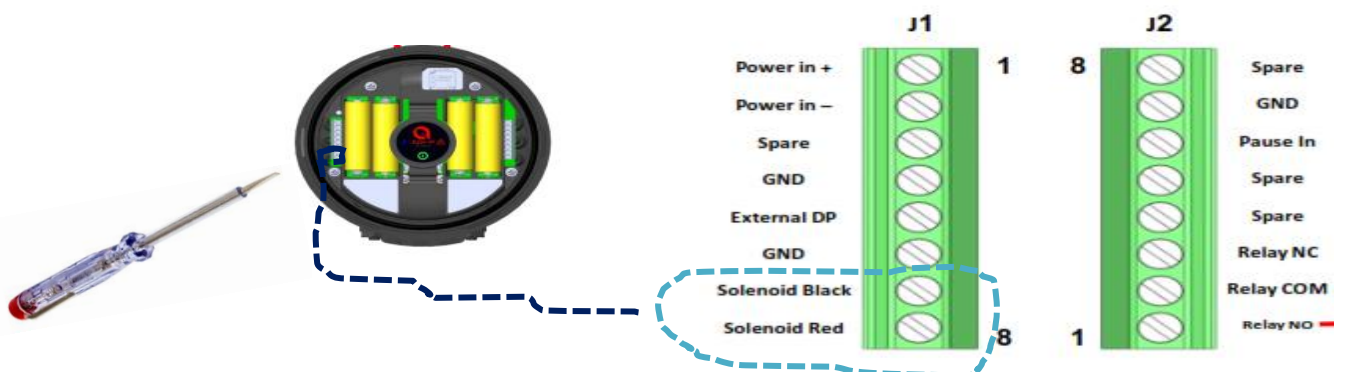

3. Remove the solenoid:
 - A. Disconnect the control tube connectors
 - B. Open the stainless-steel bolts (connecting the solenoid to the bracket) and remove the solenoid

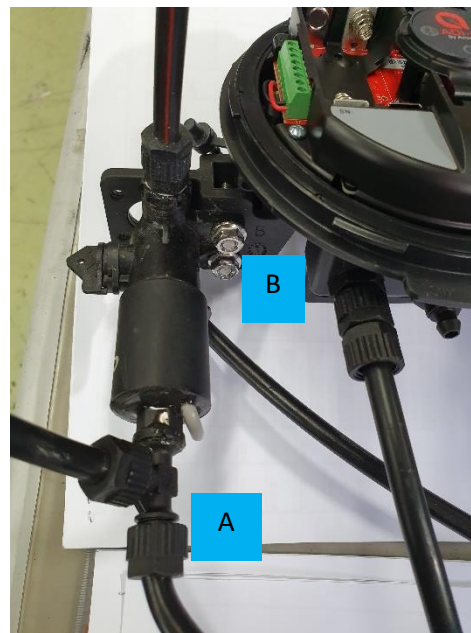

4. Assemble the new solenoid on the existing bracket and reconnect the red & black solenoid wires to the ADI-P inputs. Reconnect the control tube connectors (use Teflon on the threads)

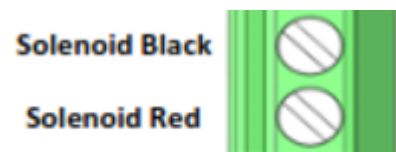

www.irrigationglobal.com adi-p controller amiad solenoid replacement instructions
technical support and online orders