

# Dose-o-Mat - Automatic Dosing Water Meter 1"

Volume based water supply & irrigation device, consisting of a water meter, a volume control dial and a valve all contained in a single unit.

## Description

The Dose-O-Mat line of automatic metering valves provides a reliable and economical solution for a wide variety of water supply, irrigation applications and Dosing livestock drinking water

A variety of models and sizes are available to meet virtually any operational requirements and budget.

The desired quantity is set using the volume control

dial, according to local needs or crop and soil.

It automatically closes the valve once the pre-set quantity of water has passed through the unit.



**Operation is extremely simple, it does not require neither skilled labor nor intensive training and of course no electric nor battery power**

## Features and Benefits

- Volumetric Shut-Off Valve
- No electricity required
- Simple design and high-quality materials
- Easy installation and operation
- Can be installed in any position
- Extreme accuracy and dependability
- Minimum maintenance - Negligible head loss

## Technical Specifications:

Volume based irrigation device, consisting of a water meter, a volume control dial and a valve all contained in a single unit.

### Dimensions :

**Length** 210mm [8.4"] **Width** 90mm [3.5"] **Height** 117mm [4.7"]  
**Weight** 0.52 Kg [1.1 Lbs]

Flow rates, Dials and Volume		Available dials:	
Performance		0 to M3	0 to Gallon
Min. Flow Rate	0.5 (m3/h) [2.2 GPM]	1	2500
Max. Flow Rate	5.0 (m3/h) [22.9 GPM]	3	
Min. Working Pressure	0.5 (bar) [7.25 PSI]	10	
Max. Working Pressure	10.0 (bar) [145 PSI]	50	
Max. Working Temperature 60°C [140 °F]			

[www.irrigationglobal.com](http://www.irrigationglobal.com)

[service@irrigationglobal.com](mailto:service@irrigationglobal.com)

Made in ISRAEL




# Dose-O-Mat Model K-KZ 1"

## Operations instructions, Start-Up Operation

NOTE: There must be available flow through the Dose-O-Mat valve and system to check and adjust valve. Ensure that a downstream demand is created by opening field valves, sprinklers, etc. Please verify that the unit is installed according to the flow direction! (Black arrow on the body top).

1. Mount the unit according to the lower body **yellow direction arrow**.
  2. Close main valve by fully turning setting knob **(1)** on top of the valve counter-clockwise until dial face is on zero exactly in front of the body arrow **(2)** and clicks.
  3. Open fully the upstream gate valve but open gate the downstream gate valve only slightly 10% (if applicable). Main valve should remain closed.
  4. Slowly turn setting knob (1) on top of the valve.
- Turn it **counter-clockwise** to the desired volume on the dial face aligning the desired volume with arrow **(2)** on the valve body. **Try not to turn the knob clockwise**
5. Open the downstream gate valve fully (if applicable) and valve should open completely for normal Operation.

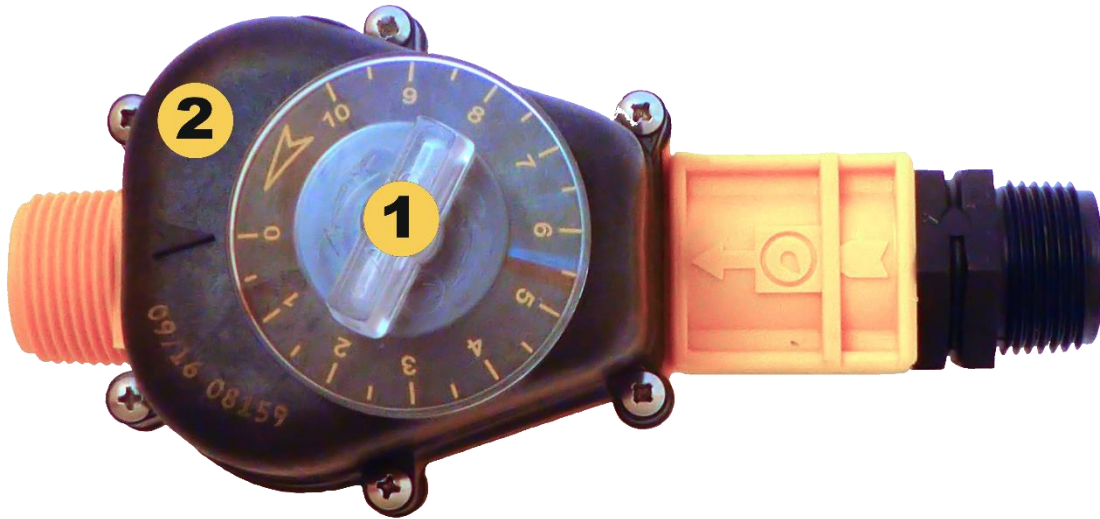

### Optional

1" Universal (BSPT/NPT) Swivel adapters (Pair)

[www.irrigationglobal.com](http://www.irrigationglobal.com)  
[service@irrigationglobal.com](mailto:service@irrigationglobal.com)

**Made in ISRAEL**

