

amiad original filters by www.irrigationglobal.com

AMIAD Water Systems Ltd.

Filtomat M100 Series Models: M104LPN & M106LP **Electronically-Controlled**

Serial number:	
Order number:	
Catalogue number:	
Filtration degree:	
Tested by:	

Installation, Operation and Maintenance Instructions

Œ

Ref: 910101-000484 / 02.2022 **Original Instructions**









Amiad Water Systems Ltd. M100 Series Models: M104LPN & M106LP - Electronically-Controlled

This document is the user-manual of the Filtomat M100 Electronic Controller Series. It describes the installation, the operation and the maintenance procedures of the M104LPN & M106LP filters.



Disclaimer:

Copyright © 2018 Amiad Water Systems Ltd. All rights reserved.

The contents of this document, including without limitation all information and materials, images, illustrations, data, drawings, names and any other such materials that appear in this document are the sole property of Amiad Water Systems Ltd., including any intellectual property rights, whether registered or not, and all know-how contained or embodied therein. Amiad may alter, remove or change the Content without any further notice. You may not reproduce, copy, modify, create derivative works from, sell or participate in any sale of, or exploit in any way, in whole or in part, any of this document or its content.

The confidential nature of and/or privilege in the file enclosed is not waived or lost as a result of a mistake or error in this file. If you received this file in error, please notify Amiad immediately at info@amiad.com.

This document does not replace any certified drawing, procedure or information provided by Amiad in reference to a specific customer, site or project.

Amiad assumes that all users understand risks involved within this file and/or its attached materials. This document is given in good faith and is not intended to impose any obligation to Amiad. While every effort has been made to ensure the information in this manual is accurate and complete, we would appreciate if you can bring any errors or omissions to the knowledge of Amiad or consult Amiad experts or its authorized representatives if you have any questions.

Amiad Water Systems Ltd. D.N. Galil Elyon 1, 1233500, Israel Tel: 972 4 690 9500 | Fax: 972 4 814 1159 Email: info@amiad.com



www.amiad.com

M104LPN, M106LP Electronically Controlled



Table of Contents

TECHNICAL SPECIFICATIONS	4
GENERAL	4
FLUSH DATA	4
CONSTRUCTION MATERIALS	4
FILTRATION DEGREES AVAILABLE	4
SAFETY INSTRUCTIONS	5
GENERAL SAFETY INSTRUCTIONS. INSTALLATION COMMISSIONING OPERATION AND CONTROL MAINTENANCE	
DIMENSIONAL DRAWINGS MODEL M104LPN ELECTRONIC	
DIMENSIONAL DRAWINGS MODEL M106LP ELECTRONIC	
SELF-CLEANING CYCLE	10
INSTALLATION	11
DESIGN RECOMMENDATIONS PREPARATIONS FOR INSTALLATION INSTALLATION PROCEDURE IMPORTANT!!	
PREPARATIONS	12
GETTING STARTED	12
FIRST OPERATION OF THE FILTER	
TROUBLESHOOTING	13
MAINTENANCE	14
CHECKING THE FILTER	
REMOVING THE SCREEN AND THE DIRT COLLECTOR	15
RE-INSTALLING THE SCREEN AND THE DIRT COLLECTOR	20
PARTS SCHEDULE M104LPN- M106LP ELECTRONIC MODELS	22
PARTS DRAWING M104LPN- M106LP ELECTRONIC	23
CONTROL TUBES SCHEME M100 ELECTRONIC: M104LPN, M106LP	24
COVER - PARTS SCHEDULE	25
DIRT COLLECTOR - PARTS SCHEDULE	26
AMIAD LIMITED WARRANTY	27
With any inquiry please quote the Filter Serial Number, located on the filter housing.	





Technical Specifications

Consult the manufacturer for optimum flow depending on filtration degree & water quality.

General

Maximum flow rate	180m3/h	790USgpm	Consult manufacturer for optimum flow depending
			on filtration degree & water quality.
Min. working pressure	2.5bar	38psi	
Max. working pressure	10bar	150psi	
Total filtration area	6150cm ²	953 in ²	Molded screen
Net filtration area	4500cm ²	697in ²	
Inlet/Outlet diameter	100,150mm	4", 6"	Flange standard as per request.
Max. working temperature	60C	140F	
Empty / Full weight – M104LPN	90kg / 170kg	198lb / 375lb	
Empty / Full weight – M106LP	115kg / 225kg	243lb / 496lb	

Flush data

Exhaust valve	40 mm	1½"	
Flushing cycle time	15 seconds		Depending on the working pressure
Wasted water per cycle	125liter 35USgallon		at 2bar; 30psi
Minimum flow for flushing	26m³/h	115USgpm	at 2bar; 30psi
Flush criteria - Differential pressure of:	0.5 bar	7psi	time and manual operation

Construction materials

Filter housing	Polyester coated carbon steel 37-2 (St. St. 316 available on request)	
Filter lid	Polyester coated carbon steel 37-2	
Coarse screen	RPP	
Fine screen	Stainless Steel 316, molded plastic support structure	
Cleaning mechanism	PVC and Stainless Steel 316L	
Motor assembly	Reinforced nylon, brass, stainless steel	
Hydraulic piston	Stainless Steel 316, brass	
Control tubing	Polyethylene	
Seals	BUNA-N	
Control	Aluminum, Brass, Stainless Steel 316, PVC	

Filtration degrees available

Туре	Molded screen					
micron	500 300 200 130 100 80					
mm	0.5	0.3	0.2	0.13	0.1	0.08





Safety Instructions

General Safety Instructions

- Amiad filtration products always operate as components in a larger system. It is essential for the system designers, installers and operators to comply with all the relevant safety standards.
- Prior to installation, operation, maintenance or any other type of action carried out on the filter, read carefully the safety, installation and operation instructions.
- During installation, operation or maintenance of the filter all conventional safety instructions should be observed in order to avoid danger to the workers, the public or to property in the vicinity.
- > Please note: The filter enters into a flushing mode automatically, without prior warning.
- No change or modification to the equipment is permitted without a written notification given in advance by the manufacturer or by its representative, on the manufacturer's behalf.
- > Always observe standard safety instructions and good engineering practices whilst working in the filter's vicinity.
- Use the filter only for its intended use as designed by Amiad, any misuse of the filter may lead to undesired damage and may affect your warranty coverage. Please consult with Amiad prior to any non-regular use of this equipment.

Installation

General

- Install the filter according to the detailed Installation Instructions provided with the filter by the manufacturer and according to the description given in this manual.
- > Make sure to leave enough clearance so as to enable easy access for future treatments and safe maintenance operations.
- > The user should arrange suitable lighting at the area of the filter to enable good visibility and safe maintenance.
- The user should arrange suitable platforms, ladders and safety barriers to enable easy and safe access to the filter without climbing on pipes and other equipment. The user should verify that any platform, barrier, ladder or other such equipment is built, installed and used in accordance with the relevant local authorized standards.
- > Check and re-tighten all bolts during commissioning and after the first week of operation.
- Use only appropriate standard tools and equipment operated by qualified operators when installing, operating and maintaining the filter.
- When installation is required in hazardous environment sites, underground or high above ground, make sure that the site design and the auxiliary equipment are appropriate and that installation procedures are carried out in accordance with the relevant standards and regulations.
- > Ensure walking areas about the installation are slip free when wet.

Shipment and transporting

- Shipping and transporting the filter must be done in a safe and stable manner and in accordance with the relevant standards and regulations.
- > For shipping, lifting and positioning the filter, use only approved lifting equipment and authorized employees and contractors.

Electricity

- > Electric wiring should be performed by an authorized electrician only, using standardized and approved components.
- > Install a **lockable** main power cut-off switch close to the control panel.
- If due to site constraints, the control panel is installed without a clear line-of sight of the filter, an additional lockable power disconnect cut-off switch should be installed near each filter unit.
- Installation of the filter should be performed so as to avoid direct water splashing on the electrical components or on the control panel.



www.amiad.com

M104LPN, M106LP Electronically Controlled



Pneumatics

- Install a lockable main cut-off switch, featured with a pressure release mechanism, on the compressed air supply line close to the control panel.
- If the control panel is installed far away and there is no eye contact with the filter, a lockable compressed air cut-off switch, featured with a pressure release mechanism, should be installed near each filter unit.
- The user should make sure that the compressed air supplied to the filter never exceeds the maximum designated pressure for this filter. An air-pressure reduction valve should be installed on the compressed air supply line upstream of the filter's pneumatic inlet port.

Hydraulics

- > Extra safety devices should be installed on hot water applications to avoid skin burn danger.
- The user should install a manual Water Cut-off Valve next to the filter's inlet port.
- In cases where the downstream piping network downstream of the filter is pressurized an additional manual Water Cut-off Valve should be installed next to the filter outlet port.
- The user should make sure that the system includes a Pressure Release / Drainage Valve to enable release of residual pressure prior to any maintenance procedure performed on the filter.
- The user should make sure that the filter is never exposed to water pressure exceeding the maximum designated pressure for this filter, if needed a Pressure Reduction Valve should be installed upstream of the filter's water inlet port.
- Please note that the maximum working pressure indicated at the filter's specifications table includes the pressure caused by fluid hammer and pressure surge effects.

Civil Engineering

- > Make sure that the filter installation is done by Amiad qualified technicians.
- Make sure that any civil engineering work at the installation site such as construction, lifting, welding, etc. is done by qualified workers / technicians / contractors and in accordance with the relevant local standards.
- While using lifting equipment, make sure that the filter or the lifted part is chained securely and in a safe manner.
- > Do not leave lifted equipment if there is no necessity. Avoid working below lifted equipment.
- > Wear a safety helmet while using lifting equipment.
- > Make sure that the flooring is sloped for drainage and to avoid accumulation of liquids.

Commissioning

- > Read carefully the Commissioning and the First Start-up Operation instructions prior to any attempt to operate the filter.
- In order to achieve maximum performance and smooth operation of the filter it is crucial to perform the Startup and First Operation procedures exactly as described in this manual.
- Commissioning the filter should be done by an authorized Amiad technician, do not attempt to commission the filter unaccompanied since this may lead to undesired damage and may affect your warranty coverage.

Operation and Control

- > Do not operate the filter before reading carefully and being familiar with its operation instructions.
- > Observe the safety stickers on the filter and never perform any operation contradicting the instructions given.
- > Never operate or use the filter for purposes other than its original design and operational envelope.



www.amiad.com



Maintenance

Before any maintenance or non-regular operation please read the following:

- Servicing the filter should be done only by technicians authorized by Amiad.
- > Disconnect the filter from the power supply and lock the Main Power Switch.
- > Disconnect the compressed air supply, release the residual pressure and lock the Pneumatics Main Valve.
- Disconnect the filter from the water system by closing and securing the Manual Inlet Valve. In cases where the downstream piping network is pressurized, close and secure the Manual Outlet Valve also.
- > Release the residual water pressure by opening the Pressure Release / Drainage Valve.
- Empty the filter by opening the Drainage Valve.
- > In hot water systems wait till the filter components cool off to a safe temperature.
- > Place warning signs around the work area as required by the local standards and procedures.
- > Inspect the filter's safety stickers and replace any damaged or faded sticker.

Mechanical

- > When working on the filter use only appropriate standard tools.
- Always open and close valves slowly and gradually.
- Remove grease and fat material residues in order to avoid slipping.
- Before disconnecting the filter from the water supply, electricity and pneumatics and before releasing the filter's residual pressure do NOT:
 - o loosen or unscrew bolts
 - o remove any protection cover
 - o open any service port flange
- > Avoid splashing and water leakage so as to minimize slippage, electrification or damage to the equipment, caused by moisture.
- While using lifting equipment, make sure that the filter or the lifted part is chained securely and in a safe manner.
- > Do not leave lifted equipment if there is no necessity. Avoid working below lifted equipment.
- > Wear a safety helmet, goggles, gloves, and any other personal safety equipment required by the local standards and regulations.
- Human entry into a filter must be done in accordance with the relevant local safety instructions, standards and regulations for working in hazardous environment.
- Manual cleaning of filter media using high water pressure or steam should be performed in accordance with the cleaning system instructions, the local standards and regulations and without endangering the operator or the vicinity
- Manual cleaning of filter element using acid or other chemical agents should be performed in accordance with the relevant material safety instructions, the local standards and regulations and without endangering the operator or his vicinity.

Before returning to regular operation

M104LPN, M106LP Electronically Controlled


- Re-assemble any protection covers or protection mechanisms removed during service or maintenance operations.
- Make sure that all the tools, ladders, lifting devices, etc. used during the maintenance procedures are taken away from the filter area and stored
- > In order to return the filter to regular operation, follow the First Start-up Operation instructions as detailed in your user manual.
- For filters used in potable water systems it is required to disinfect the filter according to the local water authority standards and regulations before putting it back to service.

910101-000484 / 02.2022





Dimensional Drawings Model M104LPN Electronic

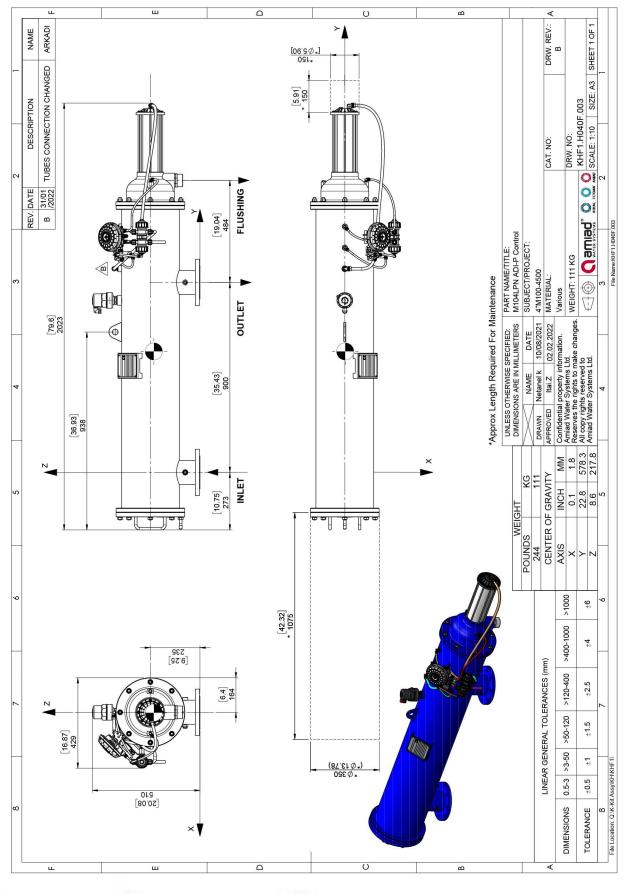

www.amiad.com

M104LPN, M106LP Electronically Controlled


FILTOMAT

ARKAL

910101-000484 / 02.2022

🕽 AMIAD



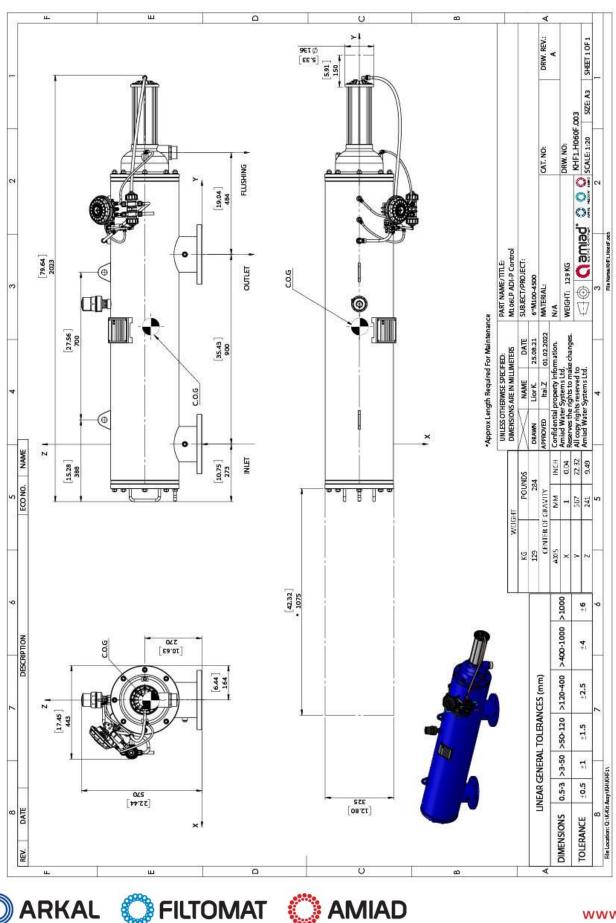

Dimensional Drawings Model M106LP Electronic

www.amiad.com

M104LPN, M106LP Electronically Controlled



Self-Cleaning Cycle

The automatic flushing cycle described below takes a few seconds and does not interrupt the supply of process water.


Water flows from the inlet through the coarse and fine screens to the outlet. At a pre-set pressure differential (0.5 bar -7 psi), the controller activates the piston and opens the flushing valve. The water from the rotor chamber flows out the drain. The pressure in the rotor chamber drops, releasing a strong flushing stream that flows through the filter.

This drop in pressure and corresponding release of the back flush stream create suction at the nozzle tips. This effect actuates spot cleaning directly in front of the openings of each nozzle on the inner surface of the fine screen. The water and particles passing through the hydraulic rotor cause the dirt collector to rotate, and the piston moves in an axial direction to the opposite end of the filter.

The combination of rotational and axial movement of the dirt collector assembly ensures that the nozzles sweep the entire inner surface of the fine screen.

When the first stroke is completed, the flushing valve closes and after a very short interval, the controller activates the second back flush stroke. The dirt collector assembly spins, moving with the piston in the opposite direction and returning to its original position.

This self-cleaning process takes between 8–15 seconds, depending on the operating pressure.

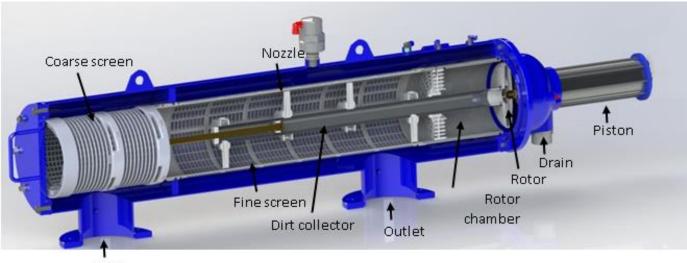

Inlet





Installation

Read these instructions carefully before installing and operating the filter.

Design Recommendations

- If a prolonged pipeline fill time causes a temporary high flow and low pressure situation, it is recommended that you install a pressure sustaining valve downstream of the filter. The pressure-sustaining valve will ensure a controlled fill-up of the line.
- The upstream pressure source should not drop below 30psi (2bar) during the rinse cycle. If this cannot be ensured, consult the manufacturer.
- If continued water delivery is essential even during "down time" maintenance periods, it is recommended that a manual or automatic by-pass be installed, and that isolating valves be installed up and downstream of each filter unit for isolation purposes.
- > Avoid placing the drainage pipe on a rising slope to minimize backpressure.
- > Secure the open end of the drain pipe to prevent movement during the rinse cycle.
- It is recommended to install a mechanical non-return valve downstream of the filter to prevent backflow damage to the screen.
- It is recommended to install a pressure gauge on the three-way valve.
- > Check that there is sufficient space to remove the lid assembly and the screen from the filter for troubleshooting.

Preparations for Installation

- > Ensure suitable lighting at the area of the filter to enable good visibility and safe maintenance.
- > Arrange suitable platforms and safety barriers to enable easy, safe access to the filter.
- > Allow a convenient approach and enough space for dismantling and maintenance.

Installation Procedure

Ensure the direction of flow is according to the arrows marked on the filter housing.

- 1. Connect a minimum of 3" (75 mm) pipe to the exhaust valve. The exhaust pipe should be designed so that it creates minimal resistance to flow of 20m3/h (88 US-gpm). Water should be allowed to flow to atmosphere freely from the exhaust pipe.
- 2. Connect a minimum of 1" (25mm) flexible tube to the rinse controller drain port. Ensure this drain line is open to atmosphere.

910101-000484 / 02.2022

IMPORTANT!!

M104LPN, M106LP Electronically Controlled

- > Prevent static back pressure or reverse flow through the filter.
- > Install a manual or a hydraulic valve downstream of the filter.

NOTE: The filter may enter flushing mode automatically, without prior warning.





Preparations

Before using the filter for the first time, go through the following check-list carefully. No special training is required to carry out these activities.

- > Check that the upstream pressure at the filter inlet is more than 2bar (30psi) during the rinse cycle.
- > Check that the filter is mounted in the correct flow direction.
- > Check that all the control tubes are connected properly and that all connections are tight.
- > The nominal diameter of the drainpipe should be at least 3" (75mm).
- > If the recommended upstream and downstream isolation valves have been installed, check that they are shut.

Getting Started

First operation of the filter

After completing the preparation check-list above, perform the following steps:

- 1. Slowly open the isolating valve at the filter inlet. Water will flow into the filter.
- 2. Check for leaks and repair if necessary.
- 3. Check that the minimum inlet pressure remains 2bar (30psi) or higher.
- 4. Slowly open the isolating valve at the outlet of the filter.
- 5. If there is a by-pass valve, close it slowly.
- 6. Ensure the flow through the filter does not exceed the filter's published maximum flow rate.
- 7. Start a manual flush by pressing the push button on the controller panel.
- 8. During the self-cleaning cycle, check the pressure at the filter inlet and in the rotor chamber.

NOTE: The minimum pressure in the rotor chamber should be 1.5bar (22psi) lower than the inlet pressure.

910101-000484 / 02.2022



M104LPN, M106LP Electronically Controlled



Troubleshooting

Problem	Possible Cause	Solution		
The filter does not flush	Valves are closed	Open valves		
	Pressure differential is not correct	 Perform a manual flush as follows: Close the filter outlet valve Check that the filter outlet and inlet pressures are equal Perform a manual flush as in item 7, page 9. Check the pressures at the inlet valve and in the rotor chamber 		
Excessive pressure in the rotor chamber	Drain pipes are not clear	Check if drain lines are clear. If necessary replace with a larger (diameter) flush drain line, or shorten the existing lines.		
Insufficient inlet pressure (less than 2 bar—30 psi)	Inlet valves not fully open	Open inlet valves to maximum. Increase the inlet pressure or throttle the outlet to increase pressure during the flush cycle.		
Pressure differential exceeds 0.7 bar (10 psi) during normal operation	Coarse filter is blocked	Check coarse filter		
Water does not flow through	Inlet lines blocked	Check inlet lines		
the filter	Isolating valves are closed	Open isolating valves		
Controller malfunction	Please Refer to the Controller's operatic 910101-000499)	on Manual (Amiad AMC Controllers 6&12 Solenoids		





Maintenance

NOTE: Depressurize the filter before maintenance (close inlet, and then outlet valve).

Checking the Filter


- 1. Unscrew the filter lid's long bolt; for safety reasons do not remove its nut!
- 2. Unscrew and remove the other nuts from the filter's lid bolts. Do not remove the long bolt's nut!
- 3. Open the lid by pulling it carefully; leave it to hang on the long bolt. Do not remove the long bolt's nut!
- 4. Extract the coarse screen and clean if necessary.
- 5. Extract the fine screen and clean if necessary. Cleaning may be performed by hosing the screen from outside-in, and/or with a nylon brush.
- 6. Check the O-rings of the fine screen and apply grease, if necessary.
- 7. Reassemble the fine screen and the coarse screen.

NOTE: Check that the dirt collector shaft is properly aligned in the bearing.

- 8. Close the filter's lid by turning it back to its original close position and fasten the nuts.
- 9. Perform the procedure described on the "First Operation of Filter" paragraph of this document.

Winterization

Filter operations should be suspended in climates where the filter is exposed to freezing temperatures.

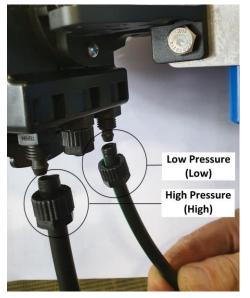

M104LPN, M106LP Electronically Controlled

1. Check that the outlet isolating valve is closed and perform two manual rinses.

2. Close the inlet valve to the filter and release the pressure.

3. Mark the tubes that are linked to the ADI-P controller and disconnect it from the controller for the duration of the winter season.

4. Remove the following items from the filter and store in a dry place:

- 1. Top lid assembly
- 2. Coarse and fine screen assembly
- Apply grease to the O-rings of the fine screen before storing.

At the beginning of the operation season, reassemble the filter elements and check the "Preparations" and the "First Operation of the Filter" paragraphs of this document.

910101-000484 / 02.2022






Servicing

Draining the Filter

- 1. Close the filter's upstream (inlet) valve.
- 2. Close the filter's downstream (outlet) valve and isolate the filter from the water system.
- 3. Use the manual start function of the electronic flushing controller and start a flushing cycle to release the pressure of the filter housing.

Removing the Screen and the Dirt Collector

- 1. Drain the filter as described above.
- 2. Unscrew and remove the nuts from the filter's lid bolts [1] but do not remove the long bolt nut! [2]
- 3. Open the lid by pulling it [3] and carefully leave it to hang on the long bolt [4]. Do not remove the long bolt's nut! Note: Attempting to remove the screen from the piston-side of the filter will cause damage to the system.

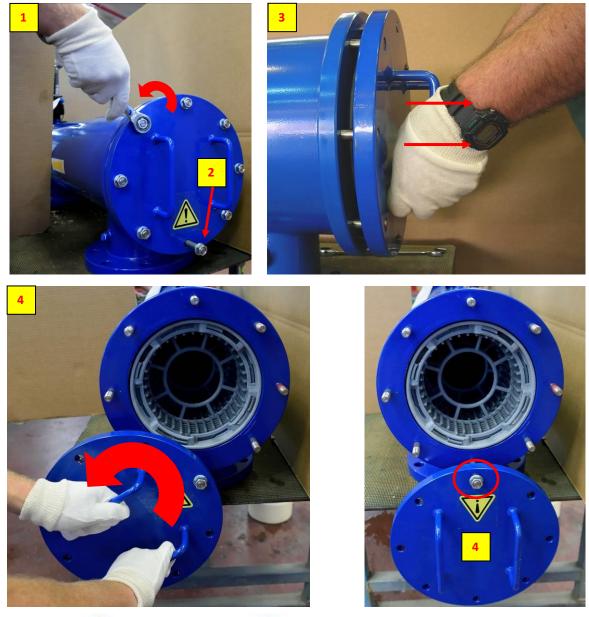



M104LPN, M106LP Electronically Controlled



910101-000484 / 02.2022



4. Pull the coarse screen out of the filter housing.







www.amiad.com


M104LPN, M106LP Electronically Controlled

910101-000484 / 02.2022

Page 16 of 28



- 5. Pull the fine screen out of the filter housing. If it is difficult to release the screens use Amiad's Push Pull Tool (Catalog Number 7001900-001985) to extract the screen by performing the following procedure:
 - A. Assemble the tool by inserting the fork shape part into the lever handle.
 - B. Insert the fork shape part over the dirt collector shaft.
 - C. Turn the tool clockwise until the fork teeth catch the fine screen handle.
 - D. Lay the tip of the tool's lever handle on one of the filter's housing cover bolts (in order not to damage the filter paint coating) and secure the joint pin.
 - E. Pull the handle firmly to release the screen.
 - F. Pull the screen out of the filter housing.

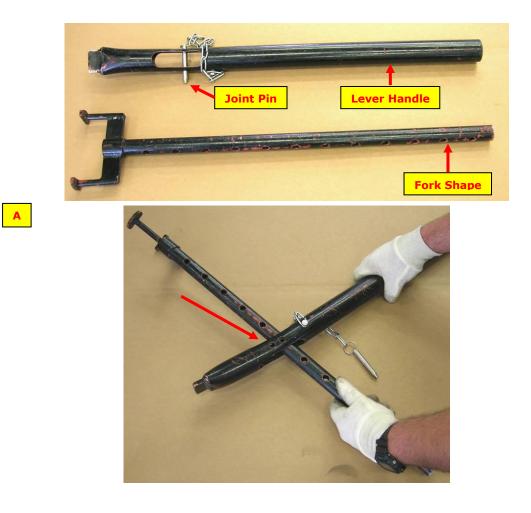

910101-000484 / 02.2022




www.amiad.com

M104LPN, M106LP Electronically Controlled

Page 17 of 28



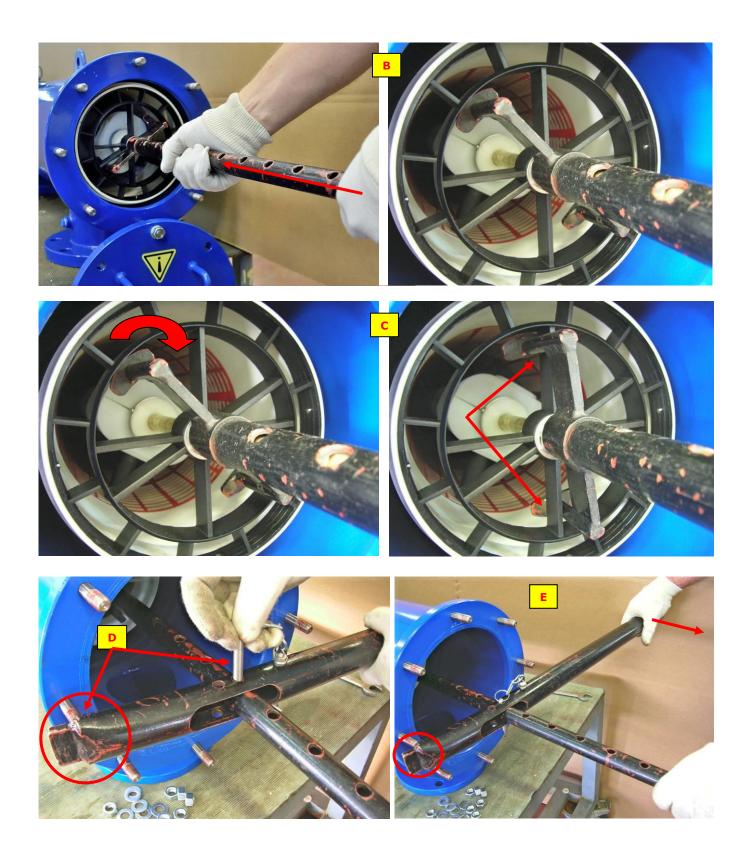

910101-000484 / 02.2022




www.amiad.com

M104LPN, M106LP Electronically Controlled

Page 18 of 28



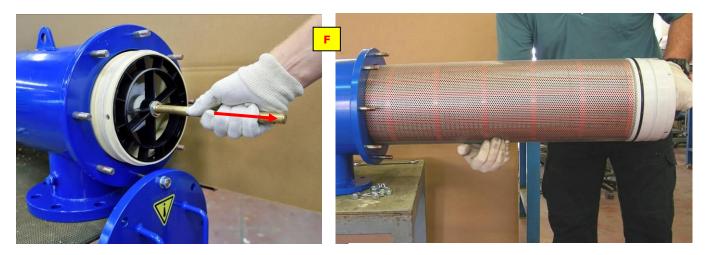


6. Depending on the actual diameter of your filter use two units of Amiad's Screen Separation Tool (Catalog Number 710103-001455 x 2) to separate the Chamber Flat Screen and the Dirt Collector from the Fine Screen.












www.amiad.com

Page 19 of 28



Re-installing the Screen and the Dirt Collector


1. Insert the Dirt Collector to the Fine Screen. Make sure that the first suction nozzle of the Dirt Collector (A) is pointing downwards when inserted into the Fine Screen.

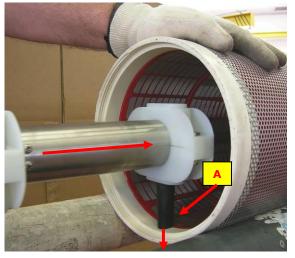


2. Use the two Amiad's Screen Separation Tools to reconnect the Chamber Flat Screen and the Fine Screen.



3. Insert the fine screen back to the filter housing (A). Use the fork part of the Push Pull Tool to lift the screen and push it through the last few centimeters till it is correctly seated in the filter housing (B).

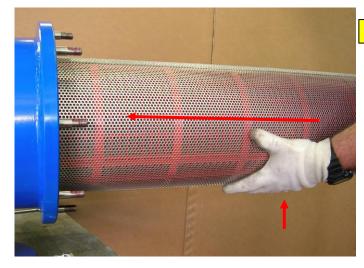

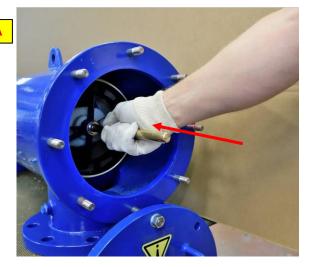




www.amiad.com

Page 20 of 28




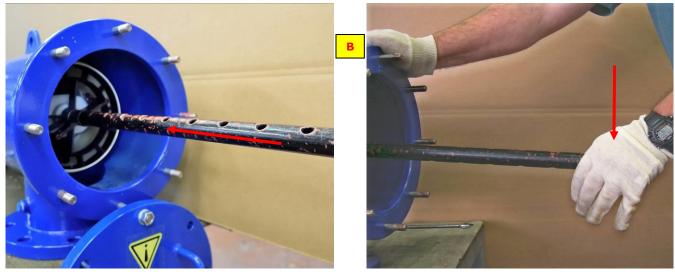




4. Insert the Coarse Screen back to the filter housing (A), return the filter's lid back to its closed position (B) and retighten the lid bolts nuts (C).



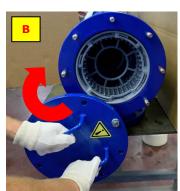







910101-000484 / 02.2022





Parts Schedule M104LPN- M106LP Electronic Models

No.	CAT No.	DESCRIPTION	Qty.	Material
1	710105-XXXXXX	M104LPN FILTER HOUSING RAL5010 PLOYESTER	1	ST.37-2
Ţ	710105-XXXXXX	M106-LP Filter Housing RAL5010 PLOYESTER - By Demand	1	ST.37-2
2	770102-000174	PARKER O-RING 2-448 NBR 70 SHORE	2	NBR
3	700190-001541	Cover Assembly Cast-Iron	1	Various
4	760104-000075	STUD BOLT 1/2"UNCX50 LONG 20/12 S/ST303	15	S/ST 303
5	760103-000077	Flat Washer M12 DIN125 Zinc Plated C/ST	16	Z. Plated C/ST
6	760102-000052	HEX NUT 1/2"UNC C/ST ZINC PLATED B18.2.2	16	Z.PLATED C/ST
7	780101-000611	REDUCER 2"X1 1/2" PP PLASSON	1	РР
8	700190-001508	Dirt Collector 4 Nozzles + Rotor & Partition M104LP/M106LP	1	Various
9	700101-002073	MOLDED WEAVEWIRE SCREEN S/ST316L 6150SQ.CM 130MIC M100 NBR SEALS	1	Various
9.1	770102-000217	DOWTY O-RING SEAL 674 ID=208.92MM TH=6.99MM NBR 55 SHORE NO FLASH	1	NBR
10	700190-004630	Injected Coarse Screen Assembly M104/6 LP/XLP	1	RPP+40%GF
11	710105-000362	M104/6LP COVER PKPK 5010 ST.37-2 POLYESTER	1	ST. 37-2
12	760104-000081	STUD BOLT 1/2" UNC 92MM S/ST303	1	S/ST 303
13	760190-000666	RUBBER BOLT COVER 1/2" BLACK	1	Rubber
14	900102-000318	LABEL GENERAL DANGER CLEAR PVC BLACK/YELLOW 75X85MM ACRILIC SILK	1	NA
15	900103-000001	NAMEPLATE ENGLISH AL FILTOMAT SELF-C CE	1	Aluminum
16	760105-000036	RIVET BLIND 3X6 DIN 7337 S/ST316	4	S/ST 316
17	730108-000120	1" Air Release Valve D-040-P BSPT	1	PP
18	720501-000172	L-CONNECTOR 3/8"M X12MM BSPT ACETAL BLACK TEFEN	3	PP Copolymer
19	720501-000229	L-CON. 1/4"M X8MM BSPT AC BLK-BLUE TEFEN	2	NYLON
20	720501-000190	PLUG 1/4"M BLUE	3	PVC
21	700103-001763	ADI-P DC KIT PACKAGE ONE SOLENOID NC	1	Various
21	700103-001764	ADI-P DC KIT PACKAGE TWO SOLENOIDS NC	1	Various
22	710103-011846	BRACKET M100 PISTON S/ST304 BOOSTER	1	S/ST 304
23	700190-006136	AMIAD ACCELERATOR ASSEMBLY	1	VARIOUS
24	760103-000128	FLAT WASHER M16 DIN125 S/ST316	1	S/ST 316
25	720501-000157	COUPLING 3/8"F BSPT PA66 BLUE TEFEN	1	PA66
26	720502-000021	CONTROL TUBE 12MM BLACK	1	PA
27	720502-000017	CONSTROL TUBE 8MM W/GREEN STRIPE	2	PA





www.amiad.com

M104LPN, M106LP Electronically Controlled




Parts Drawing M104LPN- M106LP Electronic -

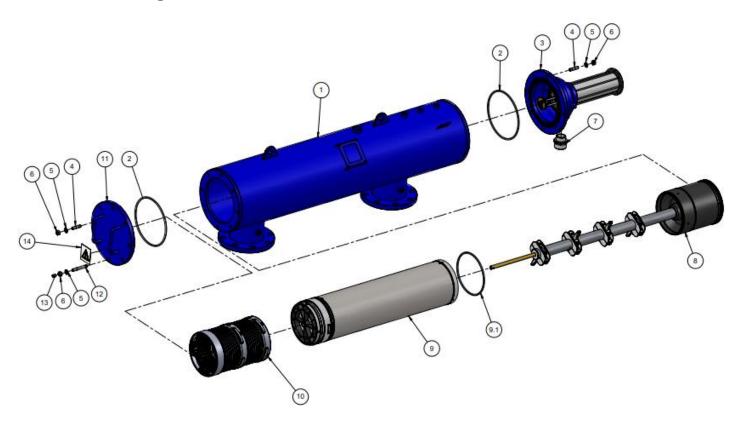

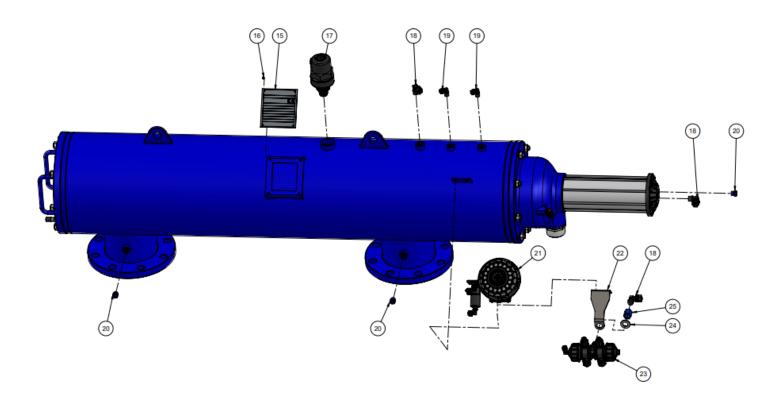



Control Tubes Scheme M100 Electronic: M104LPN, M106LP

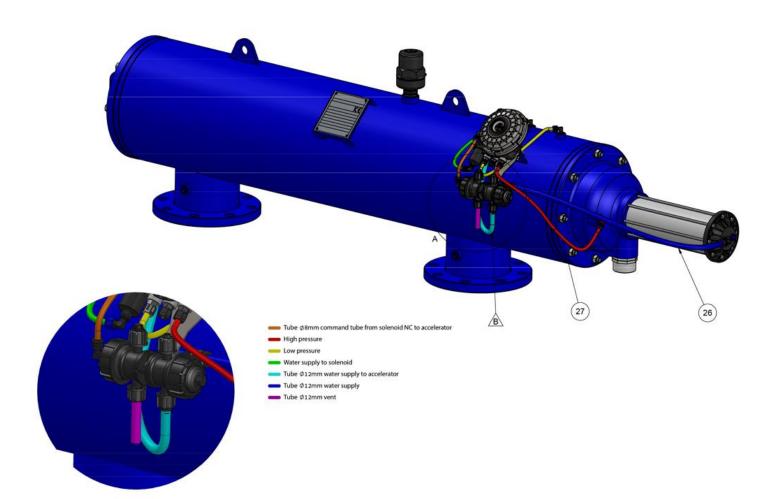


DETAIL A SCALE 1 : 3





Cover - Parts Schedule


No.	CAT No.	DESCRIPTION	Qty.	Material
1	710103-000819	Cover 8 Holes Blue M10X(X)(L)	1	Cast Iron
2	710103-000901	Seat Valve Seal M106 (Cast-Iron Cover)	1	Delrin
3	710103-000902	Ring Retaining Cover Seat Seal M106	1	PVC
4	770102-000156	O-Ring Seal (P2-351) 50+5 NBR	1	NBR
5	710103-000869	Rod Piston M1XX(L)(P) S/St316	1	S/ST 316
6	770102-000126	O-Ring Seal (P2-237) Nat	2	NBR
7	710103-000900	Holder Cylinder Seal M1XX(L)(P) Delrin	1	Delrin
8	770105-000019	Seal U-Ring 95x75x10 65+-5 NBR	2	NBR
9	710103-000843	Cylinder for M10X(L)(P) Piston ID95 S/St316	1	S/ST 316
10	710103-000799	Plug Piston M10X(L)(P)	1	PP
11	760103-000094	Flat Washer M6 DIN125 S/ST316	8	S/ST 316
12	760102-000097	Nylon Insert Lock Nut 1/4"UNC S/ST316 DIN985	8	S/ST 316
13	770102-000058	O-Ring Seal 009 NAT	10	NBR
14	760102-000078	Hex Nut 1/4"UNC S/ST316 B18.2.2	5	S/ST 316
15	720501-000908	L-Connector 1/4"Mx6mm Red-Blue	1	PVC
16	710103-000903	Rod Tie M106 Cover Cylinder S/ST303	8	S/ST 303
17	710104-000039	RL For Valve Seat New	1	NBR
18	710103-000895	Spacer Bolt Valve	3	S/ST 303
19	710104-000040	Bearing Valve Combined Assy. RL	1	Rubber
20	720501-000190	Plug 1/4"M Blue	1	PVC

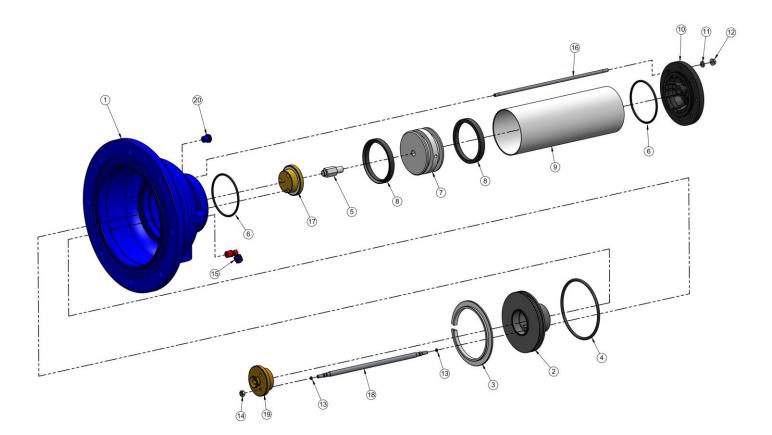



Dirt Collector - Parts Schedule

No.	CAT No.	DESCRIPTION	Qty.	Material
1	710103-001103	BODY M100 PISTON S/ST304 F/DIRT COLLECTOR	1	S/ST 304L
2	760101-000688	PHILLIPS PAN TAP SCREW #8X3/8" S/ST316	12	S/ST 316
3	710101-000704	F100 SUCTION NOZZLE OVAL RPA BLACK	4	NYLON
4	710101-000693	F100 CLIP RPA NATURAL	8	NYLON 30%GF
5	760101-000417	HEX BOLT PARTIAL TH 1/4"UNCX1 1/4" 304	8	S/ST 304
6	760102-000097	NYLON INSERT LOCKNUT 1/4"UNC S/ST316 DIN985	8	S/ST 316
7	710103-010021	CONNECTOR M100 BRASS F/DIRT COLLECTOR	1	Brass
8	710103-000800	CENTRAL SUPPORT COLLECTOR M104/6LP RPA	1	NYLON 30%GF
9	710103-001483	SHAFT DIRT COLLECTOR M300-3000A BRASS	1	Brass
10	710103-000802	PLUG TOP M104/6LP RPA DIRT COLLECTOR	1	NYLON 30%GF
11	710101-001614	M100 FLUSHING CHAMBER RPP BLACK	1	RPP+30% GF
12	710101-001629	M100 TURBINE PISTON RPP BLACK	1	Various
12.1	710103-011620	BEARING M100 PISTON K110/D2	1	K110/D2

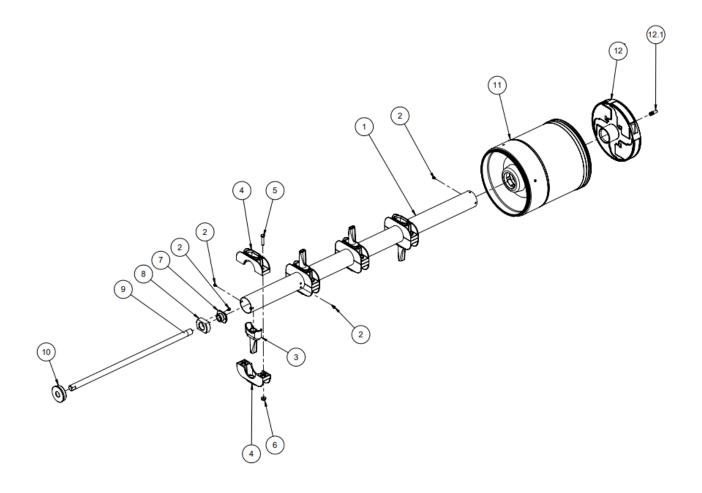

910101-000484 / 02.2022



www.amiad.com

M104LPN,M106LP Electronically Controlled

Page 26 of 28



Amiad Limited Warranty

- 1. This certificate applies to Amiad Water Systems Ltd. ("Amiad") products purchased by you (the "Buyer") from Amiad unless specifically agreed otherwise in writing by Amiad. This Warranty extends only to the original purchaser, and is not transferable to anyone who subsequently purchases, leases, or otherwise obtains the product from the original purchaser.
- 2. Amiad hereby warrants that the products are and will be free from defects in material and workmanship under normal use and service. Amiad warrants that it will correct manufacturing defects in the products, in accordance with the conditions set out in this Warranty.
- 3. This Warranty is enforceable for a period of 12 months after the date upon which the products were delivered (the "Warranty Period").
- 4. In the event that during the Warranty Period the Buyer discovers a defect in material and/or workmanship in any product or part (the "Defective Product"), it shall submit a written complaint to Amiad using Amiad's standard Buyer Complaint Form. For the receipt of the Buyer Complaint Form, the submission of the complaint or any questions please contact your service representative.
- 5. Upon written demand by Amiad the Buyer shall return the Defective Product or a sample thereof to Amiad, at Amiad's cost. If the Buyer ships any such Defective Product, Amiad suggests the Buyer package it securely and insure it for value, as Amiad assumes no liability for any loss or damage occurring during shipment. Provided however that in the event Amiad determines that this Warranty does not apply to such product, Buyer shall promptly reimburse Amiad for such cost (including freight and customs). Any returned product or part must be accompanied by the Warranty certificate and the purchase invoice. It is clarified that the Buyer may not return the Defective Product unless such return was coordinated and approved by Amiad in advance.
- 6. Amiad's obligation under this Warranty shall be limited to, at Amiad's option, the repair or exchange, free of charge, of the product or any part which may prove defective under normal use and service during the Warranty Period. The provision of a repair or replacement of a product during the Warranty Period will result in an extension of the Warranty Period by an additional period of 12 months, provided that the total accumulated Warranty Period shall in any event be no more than 18 months from the date upon which the products were delivered.
- 7. This Warranty is valid on the condition that the products are installed according to Amiad's instructions as expressed in Amiad's instruction manuals and according to the technical limitations as stipulated in Amiad's literature or as stated by a representative of Amiad.
- 8. This Warranty will not apply to damaged or defective products resulting from or related to:
 - (i) Fire, flood, power surges or failures or any other catastrophe and/or unforeseen occurrence, such as but not limited to those for which the Buyer is customarily insured for, or any force majeure events;
 - (ii) Fault, abuse or negligence of the Buyer;
 - (iii) Intake water not meeting the agreed standards, as set forth in a written document, approved by Amiad, or improper storage;
 - (iv) Improper or unauthorized use of the product or related parts by the Buyer, including Buyer's failure to operate the product in conformity with the recommendations and instructions of Amiad, as set forth in Amiad's manuals and other written materials, the operation of the product other than by a trained and qualified operator, or improper installation of the product by a third party not authorized by Amiad;
 - (v) Performance by the Buyer of maintenance or operation other than in conformity with the recommendations and instructions of Amiad, or other than in accordance with procedures defined in the literature supplied for products (including the timely replacement of requisite parts), and for services provided other than by a trained and qualified advanced operator; or
 - (vi) Any alteration, modification, foreign attachment to or repair of the products, other than by Amiad or its authorized technical representatives.
- 9. In no event shall Amiad be liable to the Buyer or any third party for any damages to property, or for any intangible or economic loss, including loss of profits, loss of customers or damage to reputation, for any damages, including indirect, special, consequential damages, or punitive damage arising out of or in connection with this Warranty, or arising out of or in connection with the product's performance or failure to perform, even if it has been advised of the possibility of such damages.
- 10. Amiad will be excused for failure to perform or for delay in performance hereunder if such failure or delay is due to causes beyond its reasonable control or force majeure preventing or hindering performance.
- 11. This Warranty set forth herein is the only contractual warranty given by Amiad and is provided in lieu of any other warranties created by any documentation, packaging or otherwise.
- 12. Amiad makes no warranty whatsoever in respect to accessories or parts not supplied by Amiad. In the event that Amiad is required to correct a Defective Product or product not covered by this Warranty, it will do so solely in consideration for additional fees.
- 13. The parties will actively endeavor to amicably settle any dispute arising between them. In the event that the parties are unable to reach an equitable settlement of such dispute, any claim or lawsuit related to the Warranty, its validity execution, its performance be brought before only the courts of Tel-Aviv, Israel. Israeli law will govern the Warranty, to the exclusion of any conflict of law rules.

M104lpn-106lp Online Orders & Support for amiad filtomat automatic metal filters



